

OTMT

TOOL STORAGE

ITEM NO.	MODEL NO.
61-001-388	TBR9004-X
61-001-389	TBR9005-X
61-001-390	TBR9006-X
61-001-392	TBR0107-X
61-001-393	TBR4108-X
61-001-396	TBR3003-X
61-001-397	TBR3005-X
61-001-398	TBR3007BP-X
61-001-401	TBR3106-X

Version date: 12/03/2013

Please Read These Instructions Before Using Your Tool Storage Unit.
Contents Subject To Change Without Notice



WARNING

1. Do not open more than one loaded drawer at a time.
2. Close lid, lock drawers and door before moving.
3. Do not stand on the product. You may fall which may cause personal injury.
4. Do not mount the product on truck bed or any other moving object.
5. Apply brakes on swivel casters when not moving unit.
6. Do not pull, instead push to move.
7. Do not step in the drawers. You may fall which may cause personal injury.
8. Lubricate the top and bottom channels of the drawer slides at least twice a year.

TOP CHEST

When locking unit, first make sure to close all drawers. For units with a door, insert the locating tab of the door into the slot and turn the key to the left. To lock units without a door, close lid and turn the key to the left.

To unlock units with a door, turn the key to the right and pull the door outward. To unlock units without a door, turn the key to the right and slide the drawer out.

INTERMEDIATE CHEST AND ROLL CABINET

When locking unit, first make sure to close all drawers. For units with a door, insert the locating tab of the door into the slot and turn the key to the left. To lock units without a door, close lid and turn the key to the left.

To unlock units with a door, turn the key to the right and pull the door outward. To unlock units without a door, turn the key to the right and slide the drawer out.

DO NOT slam the drawers as they may not lock after that, and bar tabs or lock pockets may be damaged. Should damage occur, remove the drawers (following steps below). With a screwdriver or pliers straighten out the damaged tabs or lock pockets. (a) Lock Bar Tab; (b) Lock Pocket. To unlock the unit, turn the key to the right and slide drawer out.

(See **Figure 1**)

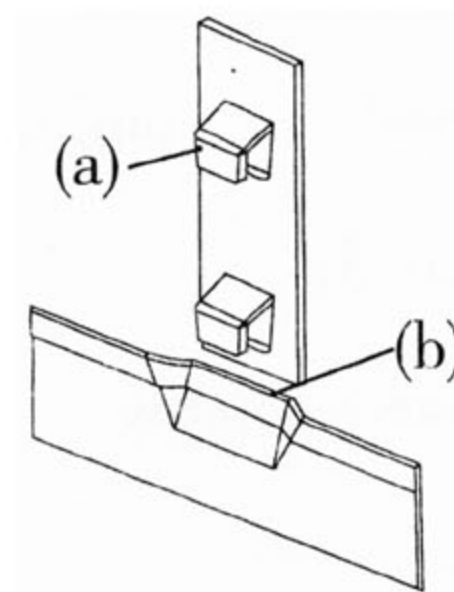 


Figure 1

IF IT BECOMES NECESSARY TO REMOVE DRAWERS

If it becomes necessary to remove drawers, follow these drawer removal instructions:

1. Roll Formed Drawer Slides

- 1) Pull drawer all the way open then push back a fraction of an inch.
- 2) Insert a screwdriver into the slot (as shown) in the slide and push in on the stop until the drawer clears the lance. Repeat the procedure on the other slide and remove drawer.
- 3) To re-install drawer, pry stop far enough out to engage lances ($3/16"$ to $1/4"$) and push drawer onto slide until stops engage the lances. (See **Figure 2**)

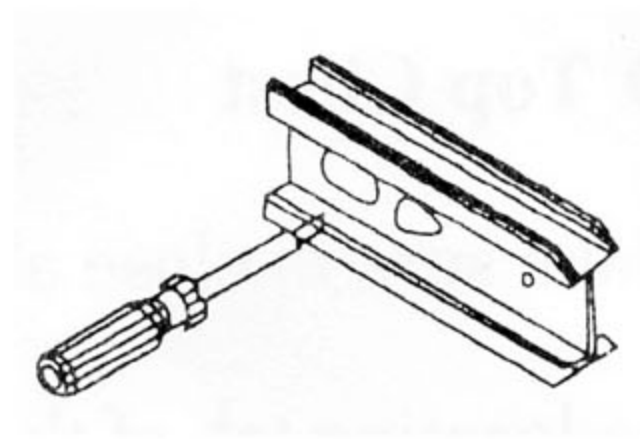 


Figure 2

2. Ball Bearing Drawer Slides

Ball bearing slides have black retaining clips. To remove drawer, the retaining clips need to be released by pushing lever up (right hand side of slide) and down (left hand side of slide) simultaneously, and pulling drawer out (See **Figure 3**). To re-install drawers, simply place drawer onto slides and push in fully.

 


Figure 3

CASTERS AND SIDE HANDLE

Roll cabinet is supplied with heavy duty casters, including two swivel casters with brakes and two fixed casters. The side handle must be fixed on the same side as the swivel casters. (See **Figure 4**)

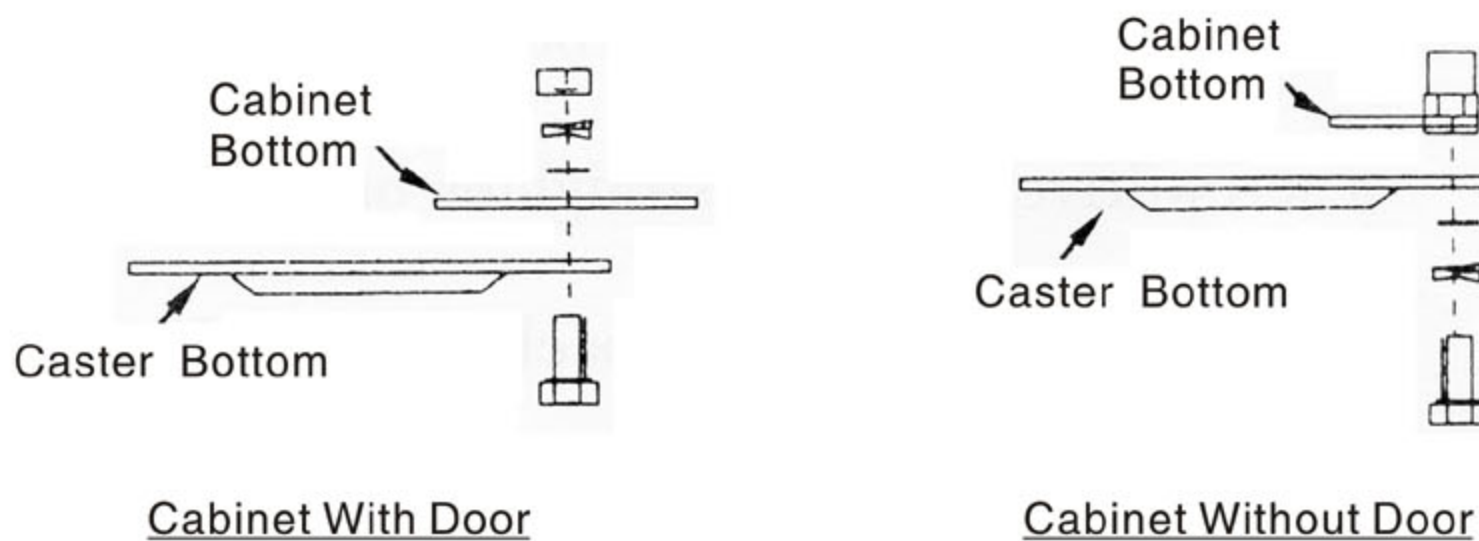 


Figure 4

OTMT