



Operational Manual & Parts Listing

Model 3624 Abrasive Blast System

P.O. Box 815 Dowagiac, MI 49047 USA
 Ph 269-782-9670 Fx 269-782-9623 on the web: cycloneblasters.com
 email cyclonemfr@frontier.com



Safety alert signal words based on ANSI Z535.4-1998 are used to alert the user of a potentially hazardous situation that may be encountered during operation of this equipment. ANSI definitions are as follows:

CAUTION

Caution used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



CAUTION

Caution indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate damage.



WARNING

Warning indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.



DANGER

Danger indicates an imminently hazardous situation which, if not avoided, will result in serious injury or death.

CAUTION



- 1) Follow all electrical and safety codes as well as the National Electric Code (NEC) and the Occupational Safety & Health Act (OSHA).
- 2) Follow assembly instructions BEFORE plugging system in to electrical or air supply. Use caution even when installing a light bulb.

CAUTION



- 1) The unit is equipped with a 3 prong grounding plug for your protection against electrical shock. Use only adequate extension cords with 3 prong grounding type plugs which are appropriate for long periods of use. Replace damaged or worn extension cord(s) immediately. Use a 3 prong receptacle to plug system or extension cord into.
- 2) Make sure power source conforms to the requirements of your equipment.
- 3) This is a dry blast system. It is not made to accommodate use with anything liquid or metal.
- 4) Change blasting material regularly. Continued use of blast abrasives will result in poor performance and excess dust.
- 5) Do not exceed recommended maximum air pressure of 120 P.S.I.
- 6) Check and clean dust collection system and filters regularly. Do not wait until dust is escaping from dust collection housings and/or blast cabinet before cleaning the system.

WARNING



- 1) Keep any spill blast abrasive clear from all paths around and near the blast cabinet. Many blast abrasives are powder fine and can be very slippery causing a person to slip and fall.
- 2) Silica sand should be avoided for use in blast systems for health hazards.

DANGER



- 1) DO NOT OPERATE CABINET WITH LID AND/OR DOOR OPEN!! This will result in skin damage, serious eye damage and/or blindness if the blast spray were to come into contact with unprotected parts of the body.
- 2) This system is assembled standard with a 1/4" thick clear acrylic view window. Replacement with tempered or single strength glass IS DANGEROUS. Replacing view window with material other than acrylic will result in dangerous glass breakage that can injure the operator or bystanders.
- 3) Never use any type of flammable or combustible material in this blast system.

How To Assemble and Install Blast Cabinet

For Starters:

- 1) Open cabinet side door and remove dust collection system and electrical package from the inside of cabinet.
- 2) Open electrical package. Remove all parts for easy identification.
Electrical package includes: Light assembly, electrical assembly bag, manual and quality control sheet.

Electrical Assembly Installation:

- 1) Remove electrical assembly and electrical packet from bag. Follow instructions for installing the electrical assembly.
- 2) Make sure cabinet IS NOT PLUGGED INTO ELECTRIC SUPPLY WHEN INSTALLING OR REPLACING LIGHT BULB!
Open cabinet, reach in and screw one max 70 watt rough service lamp into socket located just inside the cabinet.

Air Connection:

- 1) Attach the hose fitting and hose from your compressor into the 1/2" npt port on the safety valve mounted on the left hand side of cabinet. A thread sealant is suggested. Do not over tighten hose into valve.

Dust Collection System:

- 1) Assemble the dust collection system according to manufacturers directions. The dust system hose should fit into the 2 1/4" hole found on the upper left hand side of blast unit. It just slides in-no holding device. Plug cabinet into a grounded outlet. The blast cabinet has a 3 pronged grounded plug to guard against electric shock. If only 2 pronged receptacle is available, a ground adapter can be used. Make sure the green lead from the adapter is properly attached to a grounded wire system. If any extension cords are used, be sure they are in good condition.


Note: The Canadian Electrical Code prohibits the use of 3 pronged adapters.

Final Notes:

- 1) Pour dry blast media through the metal screen on the inside of cabinet into the blast hopper. We suggest 10-20 lbs. of blast material. Use of anything liquid or metal is not suggested. This system is not equipped to operate with soda blast material.
- 2) Place part to be blasted on work grate inside cabinet.
- 3) Close lid and latch. Make sure door is closed and latched as well.
- 4) Turn switch on, this will operate the light and the dust collection system.
- 5) Place hands into gloves. Hold onto the blast gun assembly.
- 6) Depress trigger. It may take several seconds until the blast media will come out the nozzle end.

Trouble Shooting

<u>Problem</u>	<u>Cause</u>	<u>Remedy</u>
Excessive Dust	Dust collection system failing Too much blasting material Blasting material worn	Clean out canister and/or replace filters. Remove excess material Replace with new material
Surging	Too much blasting material	Remove excess material Cover hole in metal pick up tube with braided sleeve on tube.
Inadequate Blast	Blast material worn Gun parts worn Too much air Too much blast material	Replace with new material Replace with new nozzle & orifice Regulate air to 70-90 psi Remove excess material. 10-20 lbs max
Static	Change in humidity Faulty ground wiring	Stand on cardboard/rubber mat. Install static electric band. Check electrical wiring Get lined gloves
Unit Won't Blast	Excessively worn gun parts.	Replace parts and be sure they are in the proper place.

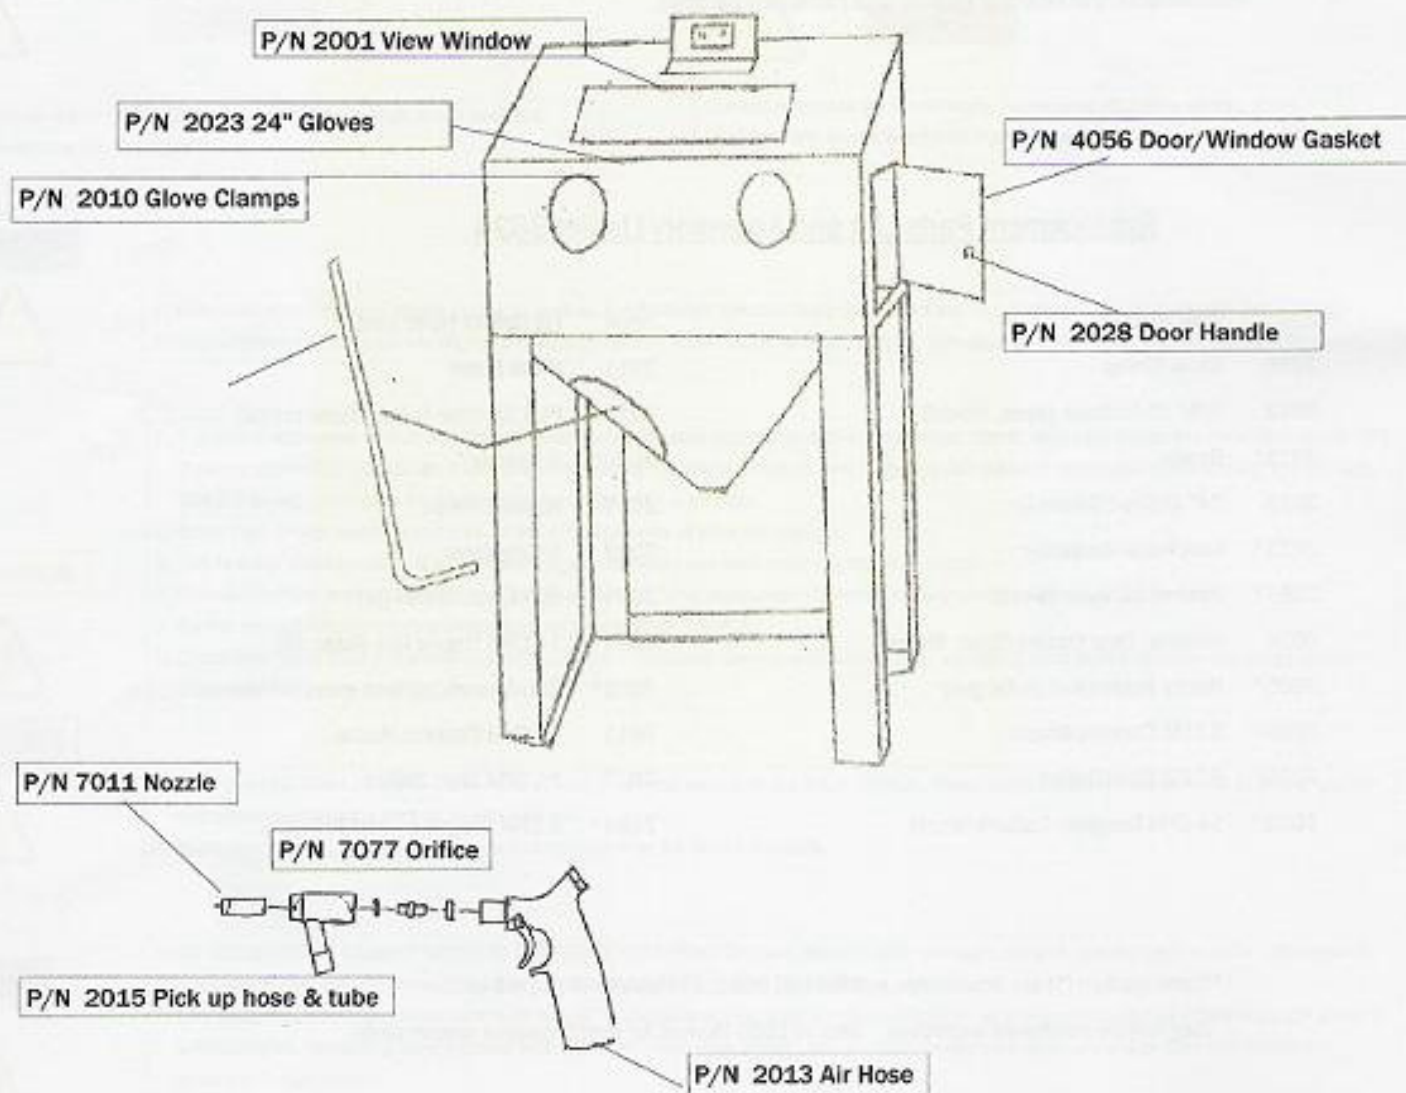

Warranty:

Cyclone abrasive blast cabinets are warranted against defects in workmanship or materials in accord with the following terms:

- * Warranty extends to the original owner only.
- * Warranty does not cover blast cabinets used in commercial rentals.
- * Warranty is valid for one year (1) following the date of purchase.
- * Warranty does not cover standard wear items such as the nozzle, orifice, blasting material, window and gaskets.
- * Warranty does not cover misuse of blast cabinet This includes failure to follow instructions.
- * Warranty does not cover blast unit if altered or otherwise changed from its original state from the factory.
- * WARRANTY DOES NOT COVER DAMAGES IN TRANSIT.

IN SUCH CASES, THE RECEIVER SHOULD CONTACT THE FREIGHT CARRIER WITHIN

15 DAYS OF DELIVERY TO FILE A CLAIM. IT IS NOT THE RESPONSIBILITY OF THE MANUFACTURER OR SUPPLIER TO FILE THE CLAIM.

IF ANY PARTS SHOULD BE REQUIRED TO FIX A FREIGHT DAMAGED UNIT, THE RECEIVER WILL BE BILLED ACCORDINGLY. THIS BILL CAN THEN BE TURNED OVER TO THE FREIGHT CARRIER.

USERS SHOULD CALL THEIR DISTRIBUTOR OR THE FACTORY UPON INSPECTION OF ANY PROBLEM. A TECHNICAL PERSON CAN ASSIST YOU.

This warranty grants the user certain legal rights. Users and purchasers may also be protected by other rights that vary with location.

Note: Except for the warranties set forth above, Cyclone makes no other warranties of any kind-express or implied, including warranties of merchantability of fitness of product for a particular purpose.

Replacement Parts List and Accessory Listing 3624

2001	View Window	2004	Lid Gasket (spec model)
2010	Glove Clamp	2011	Glove Insert
2013	3/8" ID Air Hose (Spec. Model)	2015	Pick Up Hose & Tube (spec model)
2018*	Gauge	2019*	Regulator
2023	24" Unlined Gloves (pr)	2027	Window Frame
2031*	Foot Pedal Assembly	2032	Safety Valve
2057*	Pack of 12 Mylar Sheets	2074*	32" Lined Gloves (pr)
4056	Window/Door Gasket (Spec. Model)	7001	14 CFM Trigger Gun Assembly
7005*	Nozzle Holder(foot pedal gun)	7006*	Gun Assembly f/foot operated system
7009*	5 CFM Ceramic Nozzle	7011	14 CFM Ceramic Nozzle
7076*	5 CFM Steel Orifice	7077	14 CFM Steel Orifice
7080*	14 CFM Tungsten Carbide Nozzle	7084*	5 CFM Tungsten Carbide Nozzle

Items marked () are accessories and DO NOT COME STANDARD WITH THIS UNIT.

They may be purchased separately. See DC1500 Manual for dust collection system parts.